




25jun13 xband sitting. 25mhz total pwr vs time

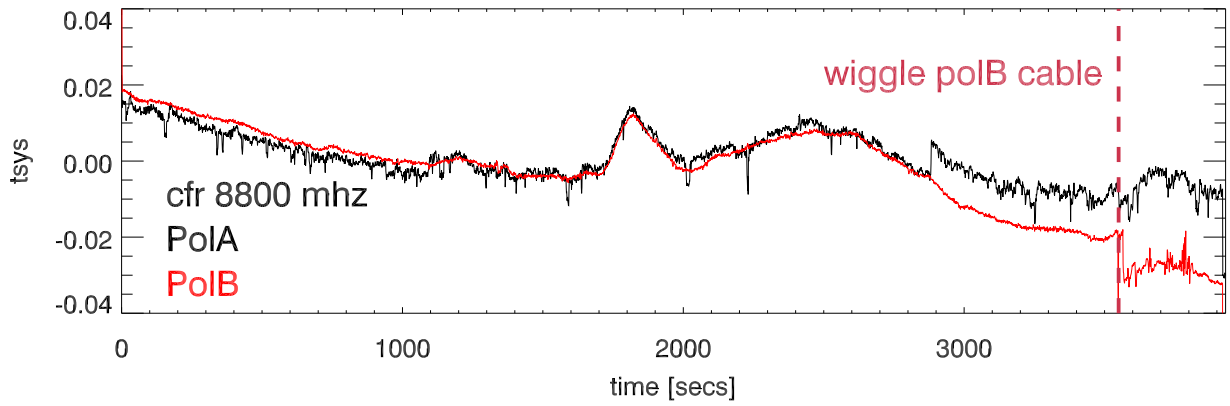


blowup. cables wiggled, tapped on dewar

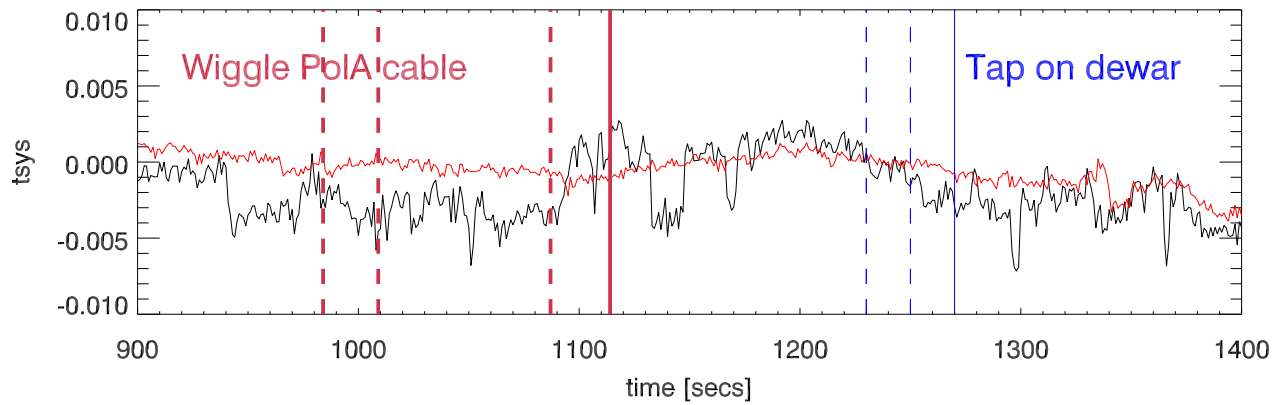


jump in polA (nothing touched)

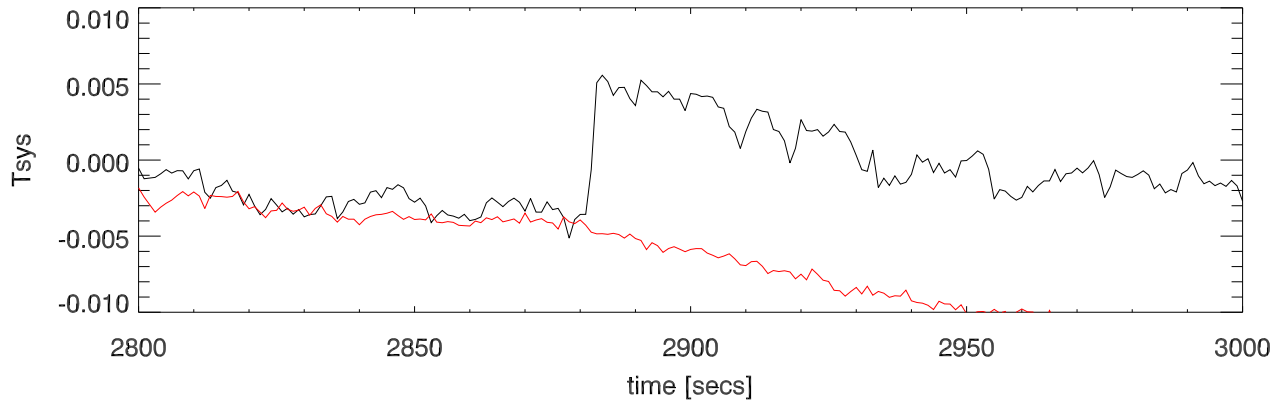

Start wiggling polB cable at output of dewar

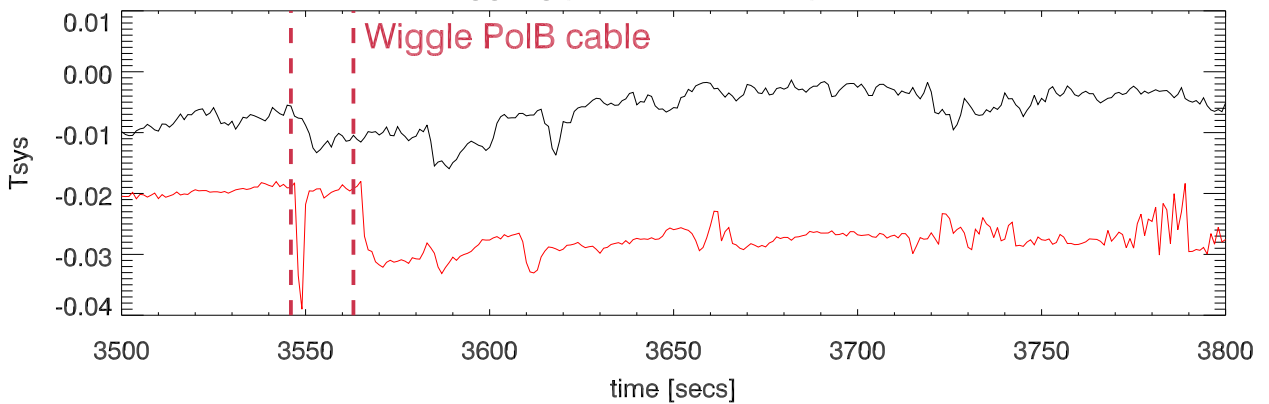

Pwr vs time after circulator polB removed

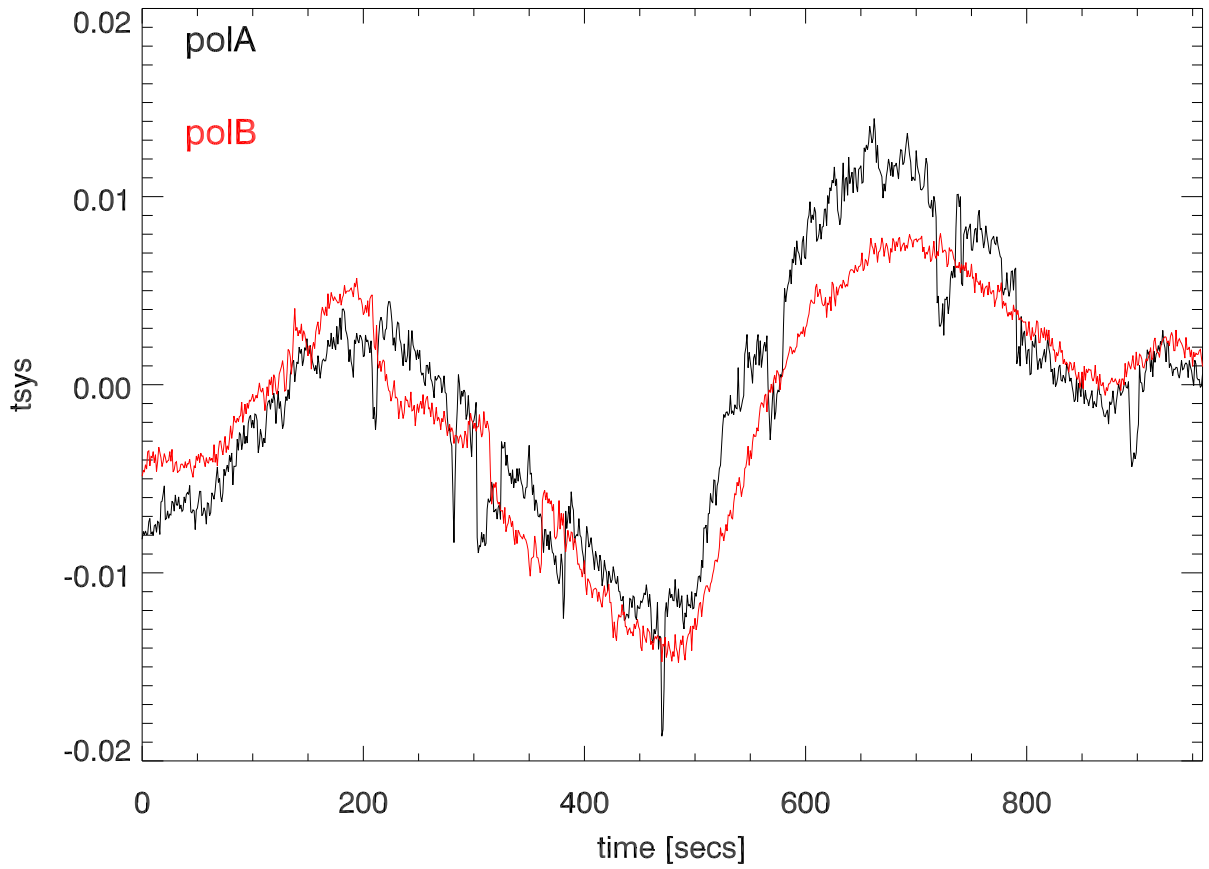

25jun13 xband sitting. 25mhz total pwr vs time

